

ATTENZIONE: leggere le istruzioni prima dell'utilizzo. **WARNING:** read the instructions carefully before use. **FR ATTENTION:** lire attentivement les instructions avant l'usage. **DE ACHTUNG:** die anweisungen bitte vor gebrauch sorgfältig lesen. **ES ADVERTENCIA:** leer atentamente las advertencias antes el uso de aparato. **IT LET OP:** leggi le istruzioni di gestione e avvertenza con attenzione. **GR ΠΡΟΣΟΧΗ:** διαβάστε τις οδηγίες πριν τη χρήση. **PT ATENÇÃO:** ler atentamente as instruções antes da utilização. **FI HUOMIO:** lue ohjeet

ennen käyttöä. **RU ВНИМАНИЕ:** перед использоvанием прочитайте инструкцию по эксплуатации. **ES PAÑA:** prije upotrebe pročitajte upute. **SK POZOR:** pred uporabo preberite navodila. **BG ВНИМАНИЕ:** Процветете внимателно инструкциите преди употреба. **SE VIKTIGT:** läs anvisningarna före användning. **DE ADVARSEL:** læs oplysningerne før du bruger maskinen. **AR تنبية: أقرا التفاصيل قبل الاستخدام.** **GR ΠΡΟΣΟΧΗ:** διαβάστε τις οδηγίες πριν τη χρήση. **IT AR:** POZOR: Před použitím si přečtěte návod.

IDROPULITRICE AD ALTA PRESSIONE pag. 9	IT
HIGH PRESSURE CLEANER pag. 16	EN
NETTOYEUR HAUTE PRESSION page 23	FR
HOCHDRUCKREINIGER Seite 31	DE
(HIDRO)LIMPIADORA DE ALTA PRESIÓN págs. 39	ES
HOGEDRUKREINIGER blz. 46	NL
MΗΧΑΝΗΜΑ ΚΑΘΑΡΙΣΜΟΥ ΜΕ ΥΨΗΛΗ ΠΙΕΣΗ blz 53	EL
LAVADORA DE ALTA PRESSÃO págs. 61	PT
KORKEAPAINEPESURI sivu 68	FI
ГИДРООЧИСТИТЕЛЬ ВЫСОКОГО ДАВЛЕНИЯ стр 74	RU
VISOKOTLAČNÍ VODENÍ ČISTAČ str. 80	HR
VISOKOTLAČNÍ VODNÍ ČISTILNÍ APARAT str. 87	SL
ВОДОСТРУЕН АПАРАТ ПОД НАЛЯГАНЕ стр. 93	BG
صفحة ماكينة غسيل بالضغط العالي 1-104	AR
BRUKSANVISNING FÖR HÖGTRYCKSTVÄTT sid. 105	SV
BRUKSANVISNING FOR HØYTRYKKSASKER sid. 112	NO
VYSOKOTLAKÝ ČISTIČ str. 118	CS

COLUMBIA LP COLUMBIA-R LP

EXPLORER LP EXPLORER-R LP

HYPERC LP HYPER-R CR LP



IT DESCRIZIONE DELL'APPARECCHIO **EN** DESCRIPTION OF THE MACHINE **FR** DESCRIPTION
 DU L'APPAREIL **DE** BESCHREIBUNG DES GERÄTS **ES** DESCRIPCIÓN DEL APARATO **NL** TOESTEL
 UITZICHT **EL** ΣΤΑΝΤΑΡ ΕΞΟΠΛΙΣΜΟΣ **PT** COMPONENTES DO APARELHO **FI** VAKIOVARUSTEET
RU БАЗОВАЯ КОМПЛЕКТАЦИЯ **HR** SERIJSKA OPREMA **SL** OBSEG DOBAVE **BG** ОПИСАНИЕ
 НА МАШИНАТА - базова окомплектовка **SV** DE VIKTIGASTE KONTROLLERNA **NO** VIKTIGSTE
 STYRINGSENHETER **CS** POPIS PŘÍSTROJE


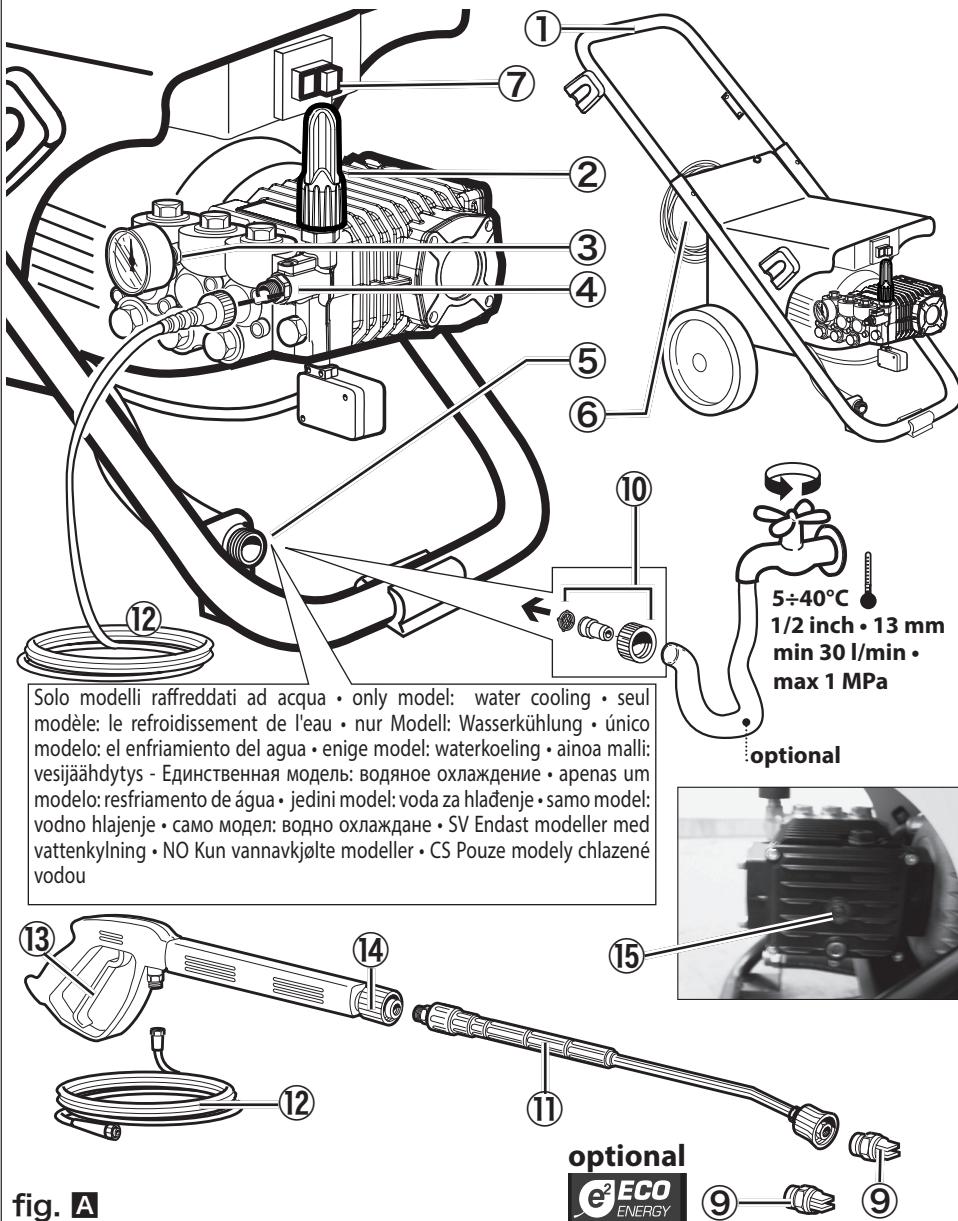


fig. A

IT In base al modello si possono verificare delle differenze nella fornitura. **EN** Depending on the model, there are differences in the scopes of delivery. **FR** Suivant le modèle, la fourniture peut varier. **DE** Je nach Modell gibt es Unterschiede im Lieferumfang. **ES** Según el modelo, hay diferencias en el contenido suministrado. **PT** Consoante o modelo, existem diferenças no volume de fornecimento. **FI** Mallien varustetaso vaihtelee, katso kuvaus laatikon kyljestä. **BG** В зависимост от модела има различни обхвати в доставката. **SV** Leveransomfånget varierar allt efter modell. **NO** Alt etter modell kan det være ulike leveringsomfang. **CS** V závislosti na modelu se mohou vyskytnout rozdíly v rozsahu dodávky

fig. B

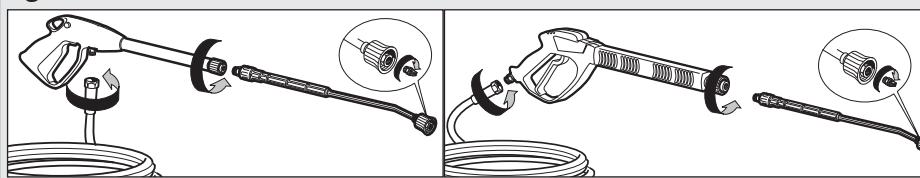

IT

- 1 Maniglia
- 2 Regolazione pressione
- 3 Manometro
- 4 Uscita acqua alta pressione
- 5 Entrata acqua + filtro
- 6 Supporto per cavo elettrico
- 7 Interruttore ON/OFF
- 8 -
- 9 Ugello A.P.
- 10 Raccordo portagomma
- 11 Lancia
- 12 Tubo flessibile alta pressione
- 13 Leva della pistola a spruzzo
- 14 Pistola a spruzzo
- 15 Indicatore livello olio

EN

- 1 Handle
- 2 Pressure control
- 3 Pressure-gauge
- 4 High pressure water outlet
- 5 Water inlet + filter
- 6 Cable holder
- 7 ON/OFF switch
- 8 -
- 9 H.P. nozzle
- 10 Rubber hose fitting
- 11 Lance
- 12 High pressure hose
- 13 Gun trigger lever
- 14 Spray gun
- 15 Oil level display

FR

- 1 Poignée
- 2 Variateur de pression
- 3 Manomètre
- 4 Sortie eau à haute pression
- 5 Entrée d'eau avec filtre
- 6 Porte-câble
- 7 Interrupteur ON/OFF
- 8 -
- 9 Buse H.P.
- 10 Raccord porte-joint
- 11 Lance
- 12 Flexible H.P.
- 13 Gâchette de la poignée-pistolet
- 14 Poignée-pistolet
- 15 Indicateur du niveau d'huile

DE

- 1 Griff
- 2 Druckregulierung
- 3 Manometer
- 4 Wasseraustritt Hochdruck
- 5 Einlauf + filter
- 6 Kabelhalter
- 7 ON/OFF Ausschalter
- 8 -
- 9 Düse A.P.
- 10 Anschluß Gummischlauch
- 11 Lanze
- 12 Hochdruckschlauch
- 13 Hebel der Handspritzpistole
- 14 Handspritzpistole
- 15 Ölstandsanzeige

	ES		PT
1	Asa	1	Kahva
2	Mando de regulación de la presión	2	Paineensäädin
3	Manómetro	3	Painemittari
4	Salida agua alta presión	4	Veden ulostulo korkealla paineella
5	Entrada + filtro	5	Sisääntulo + suodatin
6	Sujetacables	6	Johtopidike
7	Interruptor ON/OFF	7	Käyttökytkin PÄÄLLE/POIS
8	-	8	-
9	Boquilla A.P.	9	Suutin
10	Racor del porta manguera	10	Letkuliitos
11	Lanza	11	Suihkuputki
12	Tubo alta presión	12	Korkeapaineletku
13	Gatillo de la pistola	13	Käsikahvan liipaisin
14	Pistola	14	Käsikahvan
15	Indicador del nivel de aceite	15	Öljytason osoitin
	NL		FI
1	Hendel	1	Ручка для переноса
2	Drukinstelling	2	Регулятор давления
3	Manometer	3	Манометр
4	Hogedruk water uitlaat	4	Выход
5	Wateringang met filter	5	Вход + фильтр
6	Kabel houder	6	Держатель кабеля
7	AAN UIT schakelaar	7	Выключатель
8	-	8	-
9	H.P. (hogedruk) nozzle	9	Форсунка высокого давления
10	Rubberslang verbindingsstuk	10	Держатель шланга
11	Lans	11	Гидромонитор
12	Hogedrukslang	12	Шланг высокого давления
13	Pistolhendel	13	Рычаг
14	Pistool	14	Ручной пистолет-распылитель
15	Olieniveau display	15	Индикатор уровня масла
	EL		RU
1	Χειρολαβή	1	Manilha
2	Ρύθμιση πίεσης	2	Regulação de pressão
3	Μανόμετρο	3	Manómetro
4	Έξοδος νερού υψηλής πίεσης	4	Saída de água de alta pressão
5	Είσοδος νερού + φίλτρο	5	Entrada água + filtro
6	Στήριγμα για ηλεκτρικό καλώδιο	6	Suporte para cabo eléctrico
7	Διακόπτης ON/OFF	7	Interruptor lig/des ON/OFF
8	-	8	-
9	Ακροφύσια Υ.Π.	9	Bico injector A.P.
10	Συνδετικό εύκαμπτου σωλήνα	10	Junção porta borracha
11	Σωλήνας εκτόξευσης	11	Lança
12	Εύκαμπτος σωλήνας υψηλής πίεσης	12	Tubo alta pressão
13	Μοχλός πιστολιού ψεκασμού	13	Alavanca da pistola
14	Πιστόλι ψεκασμού	14	Pistola
15	Δείκτης στάθμης λαδιού	15	Indicador de nível do óleo

	HR		SV
1	Ručica	1	handtag
2	Regulacija pritiska	2	Tryckreglage
3	Manometar	3	Manometer
4	Izlaz vode pod visokim pritiskom	4	Uttag (vatten)
5	Ulaz vode + filter	5	Intag + filter (vatten)
6	Podloga električnog kabela	6	kabelhållare
7	Prekidač ON/OFF	7	ON/OFF-knapp
8	-	8	-
9	Prskalica A.P.	9	Munstycke
10	Spojnica nosač gumice	10	Koppling till gummislang
11	Usmjerivač	11	Lans
12	Fleksibilna cijev pod visokim pritiskom	12	Tryckslang
13	Polugica pištolja koji prska	13	avtryckaren på pistolen
14	Pištolj koji prska	14	Pistol
15	Indikator razine ulja	15	oljenivå
	SL		NO
1	Ročaj	1	Håndtak
2	Regulacija tlaka	2	Trykkregulator
3	Manometer	3	trykkmåleren
4	Izstop vode z visokim tlakom	4	Vannuttak
5	Vstop vode + filter	5	Vanninntak + filter
6	Nosilec električnega kabla	6	kabelholderen
7	Stikalo ON/OFF	7	AV/PÅ-bryter
8	-	8	-
9	Visokotlačna šoba	9	Dyse
10	Priključek gumijaste cevi	10	Gummikobling
11	Brizgalna cev	11	Rengjøringslanse
12	Visokotlačna gibka cev	12	Trykkslange
13	Ročica brizgalke	13	Avtrekkeren på pistolen
14	Brizgalka	14	Pistol
15	Indikator nivoja olja	15	Oljenivået
	BG		CS
1	Дръжка	1	Rukojet'
2	Регулатор налягане	2	Regulátor tlaku
3	Манометър	3	Tlakoměr
4	Отвор изходяща вода	4	Výstup vody o vysokém tlaku
5	Отвор входяща вода + филтър	5	Vstup vody + filtr
6	Държач за ел.кабел	6	Držák elektrického kabelu
7	ON/OFF старт бутон	7	Vypínač ON/OFF
8	-	8	-
9	Водна дюза ВН	9	Vysokotlaká tryska
10	Гум.връзка	10	Hadicová přípojka
11	Струйник	11	Nástavec
12	Маркуч ВН	12	Vysokotlaká flexi hadice
13	Спусък пистолет	13	Páčka stříkací pistole
14	Пистолет	14	Stříkací pistole
15	Дисплей ниво на масло	15	Indikátor hladiny oleje

fig. C

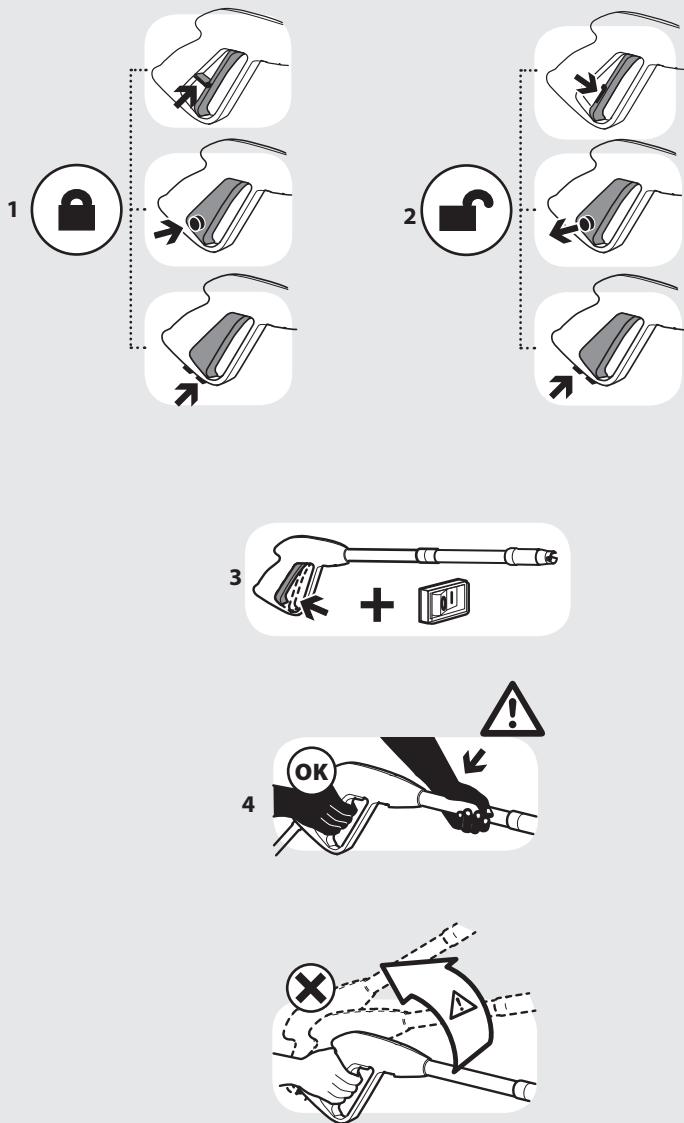


fig. D Optional

 **IT** getto spillo/ventaglio **EN** spread pattern/pencil jet **FR** jet variable **DE** vario Duese **ES** chorro regulable **NL** dunne straal/waaiervormige straal **EL** πιδακάς καρφίτσα/βενταλία **PT** jato variavel **FI** pistemäinen/viuhkamainen suihku **RU** точечная/веерообразная струя. **HR** mlaznica-fini mlaz/raspršivač **SL** i glasti/pahljačasti curek vode **BG** Настройка на водната струя **SV** sluten/spridd **NO** samlet stråle/viftestråle. **CS** úzky/široký paprsek

 **IT** alta/bassa pressione **EN** high/low pressure **FR** haute/basse pression **DE** Hoch/nieder-druck-lanze **ES** alta / baja presión **NL** hoge/lage druk **PT** alta/baixa pressao **EL** υψηλή/χαμηλή πίεση **FI** korkea/matalapaine **RU** высокое/низкое давление **HR** mlaznica-visoki/niski tlak **SL** vysokotlaková/nízkotlaková prúdnica **BG** Високо налягане/ Ниско налягане Препарат **SV** stråle högt/lågt tryck **NO** ved høyt/lavt trykk **CS** vysoký/nízký tlak

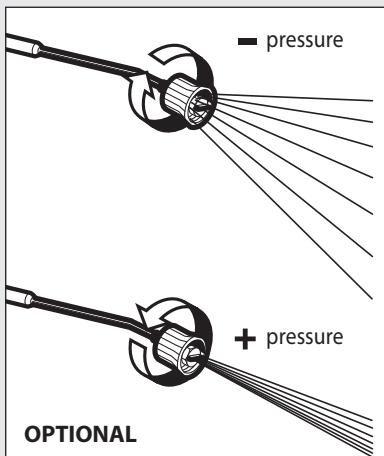


fig. E Optional

 **IT** getto ventaglio **EN** spread pattern **FR** jet d'eau en éventail **DE** großen Wasserstrahl **ES** chorro grandes **NL** waaiervormige straal **PT** jato grande **EL** πιδακάς βενταλία **H** viuhkamainen suihku **RU** веерообразная струя **SL** pahljačasti curek vode **HR** mlaznica raspršivač **BG** Предпазител **SV** sluten **NO** samlet stråle **CS** široký paprsek



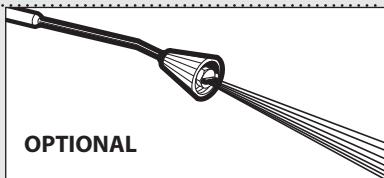


fig. F

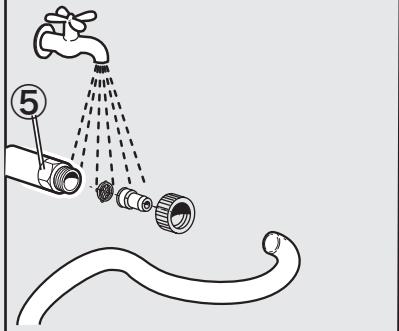

- SCHEMA IDRICO
- WATER DIAGRAM
- SCHEMA HYDRAULIQUE
- WASSERUMLAUFSCHAEMA
- ESQUEMA HÍDRICO
- WATERSCHEMA
- ΣΧΕΔΙΟ ΥΔΡΕΥΣΗΣ
- ESQUEMA HIDRÁULICO
- VEDENKYTKENTÄKAAVIO
- ГИДРАВЛИЧЕСКАЯ СХЕМА
- SHEMA VODENOG KRUGA
- VODOVODNA SHEMA
- ВОДНА ДИАГРАМА
- VATTENSCHEMA
- VANNSKJEMA

CS HYDRAULICKÉ SCHÉMA

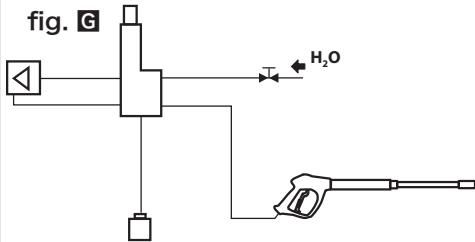


- SCHEMA ELETTRICO
- ELECTRIC DIAGRAM
- SCHEMA ELECTRIQUE
- ELEKTROSCHEMA

- ESQUEMA ELÉCTRICO
- ELEKTRICITEITSSCHEMA
- ΗΛΕΚΤΡΙΚΟ ΔΙΑΓΡΑΜΜΑ
- ESQUEMA ELÉCTRICO

- SÄHKÖKAAVIO
- ЭЛЕКТРОСХЕМА
- ELEKTRIČNA SHEMA
- ELEKTRIČNA SHEMA

- ЕЛЕКТРИЧЕСКА ДИАГРАМА
- KOPPLINGSSCHEMA
- ELEKTRISK SKJEMA
- ELEKTRICKÉ SCHÉMA

fig. H

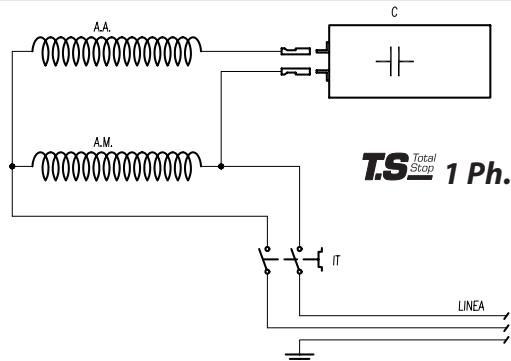


A.A. = AWOLGIM. AVIMENTO
A.M. = AWOLGIM. MARCIA
C = CONDENSATORE
IT = Interruttore termico

A.A. = SECONDARY WINDING
A.M. = PRIMARY WINDING
C = CAPACITOR
IT = THERMAL SWITCH

LINEA = LINE

DAL MOTORE = FROM MOTOR
LINEA = LINE
INTERRUTTORE TERMICO = THERMAL SWITCH

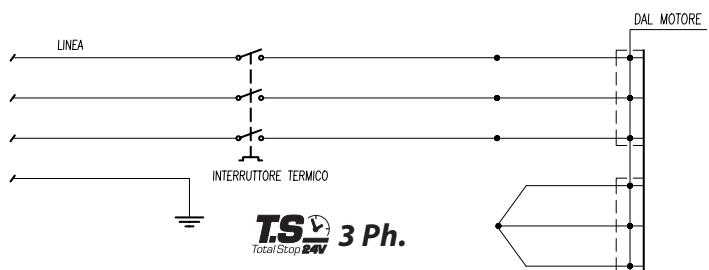

- BG A.A. – вторично ел.свързване
A.M. – първично ел.свързване
C - кондензатор
IT – термичен ключ
LINEA - линия
DAL MOTORE – от мотора
1 Ph - monoфаза
3 Ph - трифаза

INTRODUZIONE

> UTILIZZO PREVISTO

- Le prestazioni e la semplicità d'uso dell'apparecchio sono idonee ad un utilizzo **PROFESSIONALE**.
- L'apparecchio può essere usato per il lavaggio di superfici in ambienti esterni, ogni qualvolta si richieda l'uso di acqua in pressione per eliminare lo sporco.
- Con opportuni accessori opzionali si possono svolgere lavori di schiumatura, sabbiatura e lavaggi con spazzola rotativa da applicare alla pistola.

> DATI TECNICI

(vedi targhetta dati tecnici) pag. 63

> SIMBOLI



ATTENZIONE! Prestare attenzione per motivi di sicurezza.



IMPORTANTE



BLOCCATO



APERTO



SE PRESENTE



Doppio isolamento (SE PRESENTE): è una protezione supplementare dell'isolamento elettrico.

SICUREZZA

> AVVERTENZE GENERALI

Δ01 ATTENZIONE: Apparecchio da utilizzarsi solo all'aperto.

Δ02 ATTENZIONE: Alla fine di ogni lavoro, scollegare sempre il collegamento elettrico e idri-

co.

Δ03 ATTENZIONE: Non usare l'apparecchio se il cavo elettrico o parti importanti dell'apparecchio risultano danneggiate, es. dispositivi di sicurezza, tubo alta pressione pistola ecc.

Δ04 ATTENZIONE: Questo apparecchio è stato progettato per essere utilizzato con il detergente fornito o prescritto dal costruttore, tipo shampoo detergente neutro a base di tensioattivi biodegradabili anionici. L'impiego di altri detergenti o sostanze chimiche può compromettere la sicurezza dell'apparecchio.

Δ05a ATTENZIONE: Non utilizzare l'apparecchio in prossimità di persone, salvo il caso in cui queste indossino abiti protettivi.

05b - durante il lavoro non ammettete la presenza di persone o animali entro un raggio di 5 metri.

05c - operate sempre con abbigliamento adeguato per proteggersi contro l'eventuale rimbalzo di materiale asportato dal getto d'acqua ad alta pressione.

05d - non toccare la spina elettrica e l'apparecchio con le mani bagnate e a piedi nudi.

05e - indossate eventualmente occhiali di protezione e calzature con suola in gomma.

Δ06 ATTENZIONE: Il getto della lancia non deve essere indirizzato verso parti meccaniche contenenti grasso lubrificante: in caso contrario il grasso verrà disciolto e disperso sul terreno. I pneumatici e le valvole d'aria dei pneumatici devono essere lavati mantenendo una distanza minima di 30 cm; in caso contrario essi potrebbero essere danneggiati dal getto d'acqua alta pressione. Il primo segno di tale danneggiamento è dato dallo sbiadimento del pneumatico. Pneumatici e valvole d'aria dei pneumatici danneggiati sono pericolosi per la vita.

Δ07 ATTENZIONE: I getti ad alta pressione possono essere pericolosi se usati impropriamente. I getti non devono essere diretti verso le persone, gli animali, verso le apparecchiature elettriche che vive oppure verso l'apparecchio stesso.

Δ08 ATTENZIONE: I tubi flessibili, gli accessori e i raccordi per l'alta pressione, sono importanti per la sicurezza dell'apparecchio. Utilizzare solamente tubi flessibili, accessori e raccordi prescritti dal costruttore (è estremamente importante preservare l'integrità di questi componenti evitandone un uso improprio e preventendoli da pieghe, urti, abrasioni).

Δ09 ATTENZIONE: Apparecchi non dotati di **T.S.**
– Automatic Stop System: non devono rimane-

GENERAL INFORMATION

- This appliance's performance and userfriendliness make it suitable for **PROFESSIONAL** use.
- The appliance can be used for washing surfaces outdoors, whenever pressurised water is required to remove dirt.
- With special optional accessories, it can be used for foaming and sandingblasting, and for washing with a rotary brush for application to the gun.

> TECHNICAL DATA

(see thecnical data plate) pag. 63

SYMBOLS



WARNING: It is important to be careful of the following items.



IMPORTANT



LOCKED



OPEN



IF PRESENT



Double insulated (IF PRESENT): supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

SAFETY PRECAUTIONS

> WARNINGS

△01WARNING: This appliance is for outdoor use only.

△02WARNING: Always disconnect the electricity and water supplies on completion of every job.

△03WARNING: Do not use the machine if a supply cord or important parts of the machine are damaged, e.g. safety devices,

high pressure hoses, trigger gun.

△04WARNING: This appliance has been designed for use with the detergent provided or the detergent specified by the manufacturer, such as a neutral shampoo based on biodegradable anionic surface activedetergents.The use of other detergents or chemicals may put the appliance's safety at risk.

△05a WARNING: Do not use the machine within range of persons unless they wear protective clothing.

05b - Do not allow other people or animals within a range of 5m when operating the machine.

05c - Always wear suitable protective clothing in order to protect yourself against ricocheting parts.

05d - Do not touch the plug and the appliance with wet hands or when barefoot.

05e - Wear safety goggles and non-slip rubber footwear.

△06WARNING: Do not direct the nozzle toward mechanical parts containing lubricant grease, as the grease will dissolve and spread over the surrounding ground. Vehicle tyres/tyre valves may only be cleaned from a minimum distance of 30 cm, otherwise the vehicle tyre/tyre valve could be damaged by the high-pressure jet. The first indication of this is a discolouration of the tyre. Damaged vehicle tyres/tyre valves can be deadly dangerous.

△07WARNING: High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, animal, live electrical equipment or the machine itself.

△08WARNING: High pressure hoses, fittings and couplings are important for the safety of the machine. Use only hoses, fittings and couplings recommended by the manufacturer. (it is extremely important to protect these components against damage by avoiding their improper use and protecting them against bending, knocks and scratches).

△09WARNING: Appliances not equipped with **T.S. – Automatic Stop System**: must not be left in operation for more than 2 minutes with the gun released. The recycled water heats up considerably, seriously damaging

the pump.

△10WARNING: Appliances equipped with **T.S.** – Automatic Stop System: these appliances should not be left in standby for more than 5 minutes.

△11WARNING: Switch the appliance off completely (master switch on (0)OFF whenever it is left unattended.

△12WARNING: Every machine is tested in its operating conditions, so it is normal for a few drops of water to be left inside it.

△13WARNING: Take care not damage the electric cable. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

△14WARNING: Appliance with fluid under pressure. Keep a firm hold on the gun and be prepared to take the kickback pressure. Only use the high pressure nozzle provided with the appliance.

△16WARNING: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

△17WARNING: Children should be supervised to ensure that they do not play with the appliance.

△18WARNING: Never start the high-pressure cleaner without first completely unwinding the high-pressure hose.

△19WARNING: When winding and unwinding the pipe take care not to cause the high-pressure cleaner to overturn.

△20WARNING: Before unwinding or winding the hose, switch the machine off and release the pressure in the hose itself (switching off).

△21WARNING: Risk of explosion — Do not spray flammable liquids.

△22WARNING: To ensure machine safety, use only original spare parts from the manufacturer or approved by the manufacturer.

△23WARNING: Do not direct the jet against yourself or others in order to clean clothes or foot-wear.

△24WARNING: High pressure cleaners

shall not be used by children or untrained personnel.

△WARNING: Water that has flown through backflow preventers is considered to be non-potable.

△XX WARNING: the machine shall be disconnected from its power source, by removing the plug from the socket-outlet, during cleaning or maintenance and when replacing spare parts

△XJ WARNING: If an extension cord is used, the plug and socket must be of watertight construction.

△XY WARNING: Inadequate extension cords can be dangerous.

△WARNING: It is absolutely forbidden to use the machine in potentially explosive environments or areas.

△WARNING:

- NEVER EVER TOUCH THE MACHINE WITH WET HANDS OR BARE FEET.
- NEVER PULL THE POWER SUPPLY CABLE OR MACHINE IN ORDER TO DISCONNECT THE PLUG FROM THE SOCKET.
- IF DURING FUNCTIONING THE POWER SUPPLY RUNS OUT, FOR SAFETY REASONS, TURN THE MACHINE OFF.

> **SAFETY DEVICE**

△WARNING: the gun is fitted with a safety catch. Whenever use of the machine is interrupted it is important to operate the safety catch to prevent accidental activation of the jet.

- Safety features: gun equipped with safety locking device, appliance equipped with (Class I) overload cutout, pump equipped with by-pass valve or shutdown device.
- The safety button on the gun is not there to lock the lever during operation, but to prevent its accidental operation.

△WARNING: The appliance is equipped with a motor protection device: in case of device intervention, wait some minutes or, in alternative, disconnect and re-connect the product to the electric system. In case this problem repeats again or if the product does not start again, take the product to the nearest After Sales Service Point

> **STABILITY**

△WARNING: The machine must be always kept

on horizontal bases, in a safe and stable way.

> WATER SUPPLY

Water supply collection

Water supply from the water main

- Connect a supply hose (not included) to the water inlet of the unit and to the water supply.
- Open the water supply.



WARNING: (symbol) machine not suitable for connection to the potable water mains.

The cleaner can only be connected to the water mains if the water mains is separated by a backflow preventer. Make sure that the hose is at least Ø 13mm-1/2 inch and that it is reinforced.

△ WARNING: Water that has flown through backflow preventers is considered to be nonpotable.

⚠️ IMPORTANT: Only clean or filtered water should be used for intake. The delivery of the water intake tap should be equal to the double of the maximum pump range.

- Minimum delivery rate: 30 l / min.
- Maximum intake water temperature: 40°C
- Max inlet water pressure: 1Mpa

Place the cleaner as close to the water supply system as possible.

Water supply from an open container

- Unscrew the coupling part for the water inlet.
- Screw the suction hose with filter (not included) onto the water connection of the unit.
- Hang the filter in the container.
- Vent the unit before operation.
- Unscrew the high-pressure line at the high-pressure outlet of the unit.
- Switch on the unit and let it run until water free of bubbles emerges at the high-pressure outlet.
- Switch off the unit and screw on the high-pressure hose again.

Failure to comply with the above conditions causes serious mechanical damage to the pump and the loss of warranty cover.

> ELECTRICITY SUPPLY

- The appliance's electrical connection must comply with the IEC 60364-1 standard.

⚠️ IMPORTANT: Before connecting the appliance, make sure that the nameplate data are the same as those of the electrical mains and that the socket is protected by a differential security breaker with tripping sensitivity below 0.03 A - 30 ms.

- If the appliance's plug is not compatible with the socket, have the socket replaced with another of suitable type by professionally qualified staff.
- Never use the appliance in ambient temperatures below 0° C if it is equipped with a PVC (H VV-F) cable.

△ XY WARNING: Inadequate extension cords can be dangerous.

△ XJ WARNING: If an extension cord is used, the plug and socket must be of watertight construction.

Information for supply may also be obtained from the plug manufacturer.

230-240V	400-415V
3G 2,5 mm ²	4G 2,5 mm ²
max 20 m	max 30 m

USAGE

> UNPACKING

(see fig. **B**)

Take out the upper and the lower hooks, which fix the cardboard box to the pallet, take the cardboard box off, put two wheels of the machine on ground and take the pallet off.

> DESCRIPTION OF THE MACHINE

(fig. **A**)

(if fitted)

Machines equipped with delayed, low-voltage Total Stop:

When the machine is working, by releasing the gun lever, the motor stops automatically to prevent component wear during the pump by-pass phase (motor in stand-by).

By pressing the gun lever the motor starts automatically.

⚠ WARNING: do not leave the stand-by mode active for more than 5 minutes.

At the end of the operation, set the switch to "OFF".

with this disposal must not operate for more than 2 minutes with released gun. Recycled water raises its temperature remarkably causing great damages to the pump.

> INSTALLATION AND START-UP

> INSTALLATION

- Check that the master switch is turned to "OFF" and that the water filter is fitted into the pump's inlet pipe.
- Screw the snap connection into place by hand, without the aid of tools.
- Connect the water supply hose to the snap connection. The hose must have an inside diameter of at least 13 mm (1/2").
- Connect the high pressure hose to the pump's outlet pipe. Press the high pressure hose coupling fully down and then screw into place by hand without the aid of tools.
- Connect the high pressure hose to the gun. (fig. **B**)
- Turn the water tap fully on. The water temperature absolutely must be below 40°C.

☞ IMPORTANT: The washer machine has to operate with clean water in order to avoid any damages to the washer machine itself.

- Release the gun safety catch and keep the trigger pressed, allowing the water to flow until all the air has been expelled.
- Fit the lance into the gun.
- Fit the nozzle into the lance.
- Connect the plug to the power socket.

> 1ST START-UP

When starting up for the first time or after a long period out of use, connect the intake line only for a few minutes so that any dirt is vented from the delivery outlet

> START-UP

(fig. **C**)

- Whenever using the high-pressure cleaner, users are urged to hold the gun in the correct position, with one hand on the grip and the other on the spray rod.
- To start the machine, press the gun trigger and at the same time turn the master switch to "ON"

If the appliance is equipped with a **pressure regulator**:

- when the pressure is set to minimum the **T.S.** may not trigger. Therefore, do not allow the appliance to function in by-pass for more than 1 minute.
- do not act on the gun lever too frequently (this may cause a malfunction).

> APPLIANCES PROVIDED WITH THERMAL VALVE (OPTIONAL)

This device enables the machine's by-pass operation through automatic water discharge whenever it reaches a temperature of nearly 60°C and cooling working components.

⚠ CAUTION: appliances that are not provided

CARE AND MAINTENANCE

☞ IMPORTANT: Before doing any work on the cleaner, discharge the pressure and disconnect the electricity and water supplies.

CHECKING THE PUMP OIL LEVEL

Check the oil level periodically. The oil must be changed for the first time after 50 working hours, with subsequent changes every 500 hours. SAE 20/30 (750 gr) oil is recommended.

CHECKING THE WATER INTAKE FILTER

(see fig. **F**)

Inspect and clean the water intake filter on the intake union periodically. This is important to prevent fouling which may impair operation of the pump.

CHECKING THE SPRAY ROD NOZZLE

Replace the nozzle when the pressure drops below the normal values.

DESCALING

The descaling procedure must be carried out periodically with specific products. The interval depends on the hardness of the water. Pour one litre of product for every 15 litres of water into a drum containing at least 30 litres of water. Disconnect the gun from the high pressure line and place its free end in the drum, in order to form a closed circuit, and draw the solution into the machine for at least 10 minutes. The delivery end of the line should discharge into a canvas or mesh bag so that the scale removed is not returned to the circuit. Then restore the normal connection and rinse with plenty of cold water. This operation should be carried out by our after-sales service, since the descaling product may cause wear of components. Comply with the regulations in force when disposing of the descaling agent.

ELECTRIC DIAGRAM

See illustrations, **H**.

WATER DIAGRAM

See illustrations, **G**.

TROUBLESHOOTING

Before doing any work on the machine, disconnect the electricity and water supplies and discharge the pressure. Proceed systematically to identify Faults following

the chart below; if you are still unable to eliminate the problem, call in the **Authorized After-Sales Service**.

Fault	When switch "ON" the machine will not start working
Cause	<ul style="list-style-type: none"> • Plug not properly inserted in socket. • Electric socket is faulty. • The main voltage is insufficient. • The pump is stuck. • Gauge of extension lead not sufficient.
Repair	<ul style="list-style-type: none"> • Fit plug in power socket correctly. • Have electrical socket checked. • Have a check made on the suitability of the mains system. • Turn switch to ON while keeping nozzle trigger pressed; if problem persists, contact an authorised service centre.

Fault	The motor stops suddenly
Cause	<ul style="list-style-type: none"> • Thermic safety switch has tripped due to the overheating. • Cable extension seems to be inadequate.
Repair	<ul style="list-style-type: none"> • Leave motor to cool for a few minutes. If the problem persists, contact an authorised service centre..

Fault	The pump doesn't reach the necessary pressure
Cause	<ul style="list-style-type: none"> • Insufficient flow. • Water inlet filter is clogged. • Suction/delivery valves are clogged or worn out. • Pressure regulator valve set on minimum. • The nozzle is worn out.

Repair	<ul style="list-style-type: none"> Check that the delivery rate is 30% higher than the value stated on the appliance's technical data plate. Remove and clean the filter. Contact an authorised service centre. Increase the pressure by screwing in the pressure regulator knob. Replace the nozzle.
--------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Fault	Fluctuating pressure
Cause	<ul style="list-style-type: none"> The nozzle is either clogged or deformed. Suction/delivery valves are clogged or worn out. Worn gaskets. Pressure regulator valve gaskets worn. The filter is dirty.
Repair	<ul style="list-style-type: none"> Dismantle the lance and clean the nozzle with the pin provided. Contact an authorised service centre. Contact an authorised service centre. Contact an authorised service centre. Remove and clean the filter.

Fault	Water leak from appliance
Cause	<ul style="list-style-type: none"> Water leaking from the pump. Leaks from hose reel (if present). Leaks from pressure regulator valve. Leaks from water unions.
Repair	<ul style="list-style-type: none"> Contact an authorised service centre. Tighten the unions; if the problem persists, contact an authorised service centre. Contact an authorised service centre. Tighten the unions; if the problem persists, contact an authorised service centre.

Fault	Abnormal noise
Cause	<ul style="list-style-type: none"> Suction/delivery valves are clogged or worn out. Worn bearings. The filter is dirty. Extreme water temperature.
Repair	<ul style="list-style-type: none"> Contact an authorised service centre. Contact an authorised service centre. Remove and clean the filter. Bring the temperature under 50°.

Fault	Water is in the oil
Cause	<ul style="list-style-type: none"> O-rings (water and oil) are worn out.
Repair	<ul style="list-style-type: none"> Contact an authorised service centre.

> REPAIRS - SPARE PARTS

For any problems not mentioned in this manual, or if the machine breaks down, you are urged to contact an **Authorized After-Sales Service** for the relative repair or for any replacement of components with original spare parts. Use exclusively original replacement parts.

> WARRANTY CONDITIONS

All our machines are subjected to strict tests and are covered against manufacturing defects in accordance with applicable regulations. The warranty is effective from the date of purchase.

The following are not included in the warranty: - Parts subject to normal wear. - Rubber parts, charcoal, filters and the accessories and optional accessories. - Accidental damage, caused by transport, neglect or inadequate treatment, incorrect or improper use and installation failing - The warranty shall not cover any cleaning operations to which the operative components may be subjected, such as clogged nozzles and filter blocked due to limestones.

> DISPOSAL

As the owner of electrical or electronic equipment, the law (in accordance with the EU Directive 2012/19/EC on waste from electrical and electronic equipment and the national laws of the EU Member States that have implemented this Directive) prohibits you from disposing of this product or its electrical / electronic accessories as municipal solid waste and obliges you to make use of the appropriate waste collection facilities.

The product can be disposed of by returning it to the distributor when a new product is purchased. The new product must be equivalent to that being disposed of.

Disposing of the product in the environment can cause great harm to the environment itself and human health.

The symbol in the figure indicates the urban waste containers and it is strictly prohibited to dispose of the equipment in these containers. Non-compliance with the regulations stipulated in the Directive 2012/19/EC and the decrees implemented in the various EU Member States is administratively punishable.

MODELLO • MODEL • MODELE • MODELL • MODELO • MODEL MONTELO • MALLI • МОДЕЛЬ • MODELO • MODEL • MODEL • MODEL		1211 LP TS_W	1515 LP TS_W	2015 LP TS_W	2021 LP TS_W	2515 LP TS_W
Potenza ass. W • Power consump. W • Puissance W • Motor W • Potencia abs. en W • Aansluitvermogen W • Απ. ισχύς • Virrankulutus W • Потребл. мощность Вт • Potência abs. en W • Apsorbirana snaga. W • Porabljena moč W • Förbrukad effekt W • Adsorbert effekt W • Příkon W	230/240V Ph. 1~50Hz	3000				
	400/415V Ph. 3~50Hz		5000	7000	9400	8500
Motore • Motor • Moteur • Motor • Motor • Motor • Kινητήρας • Moottori • Двигатель • Motor • Motor • Motor • Motor	HP	3,5	5,5	7,5	10	9
Temp. di alimentazione (max.) • Supply temp. (max.) • Temp. maxi. d'arrivée d'eau • Zulauftemp.(max.) • Temp. del agua de entrada (máx.) • Aanvoertemperatuur (max.) • Θερμ. τροφοδότησης (μέγιστη) • Syöttölämpötila max. • Время подачи (макс.) • Temp. de admissão (máx.) • Vrijeme napajanja (maks.) • Temperatura napajanja (največ) • Matningstemperatur (max) • Forsyningstemperatur (maksimal) • Vstupní teplota vody (max.)	°C			40		
Portata di alimentazione (min.) • Supply rate (min.) • Débit mini. d'arrivée d'eau • Zulaufmerge (mid.) • Caudal de alimentación (min.) • Min. ingaande water debiet • Парохът трофодотърщ (електрич.) • Syöttövirtaama (min) • Пропускная способность подачи (мин.) • Quantidade de admissão (mín.) • Nosivost napajanja (min.) • Zmogljivost napajanja (min) • Matningseffekt (min.) • Forsyningskapasitet (minimal) • Vstupní průtok (min.)	l/min л / мин			30		
Pressione entrata max. • Pressure inlet max. • Pression entrée max. • Druck Einlauf max. • Presión entrada máx. • Max. Toeoedruk • Μέγιστη πίεση εισόδου • Syöttöaine max. • Макс. входное давление • Pressão entrada máx. • Maksimalni ulazni pritisak • Maksimalni tlak na vstopu • SV Maximalt inmatningstryck • No Maksimalt trykk i inngang • Max. vstupní tlak	MPa			1		
Prevalenza per alimentaz. da serbatoio • Suction height from a tank • Hauteur d'aspiration dans un réservoir • Saughöhe aus offenem Behälter • Altura de aspiración desde un recipiente • Aanzuighoogte van een tank • Υπεροχή για τροφοδότηση από δεξμενή • Rääbasilisesti säiliösystöön • Высота напора из-за подачи от бака • Altura para alimentação desde reservatório • Prevaga za napajanje iz spremnika • Sesalna višina za napajanje posode • SV Uppsigningens höjd från tanken (optimalt) • NO Oppsigningshøyde fra beholderen (foretrekken) • Výška pro nasávání z otevřené nádrže	m			1,5		
Pressione max. • Pressure max. • Pression max. • Druck max. • Presión máx. • Max. druk • Μέγιστη πίεση • Paine max. • Макс. давление • Pressão máx. • Maks.pritisak. • Najvišji tlak • Maximalt tryck • Maksimal trykk • Max. tlak	MPa	12	15	20	20	25
Portata Max. • Volume Max. • Dèbit Max. • Leistung Max. • Caudal Max. • Max. Debit • Μέγιστη парохъ • Syöttövirtaama (max) • Макс. Пропускная способность • Capacidade máx. • Maks.nosivost. • Največja zmogljivost • Maximal effekt • Maksimal kapasitet • Max. průtok	l/min л / мин	11	15	15	21	15

MODELLO • MODEL • MODELE • MODELL • MODELO • MODEL MONTELO • MALLI • МОДЕЛЬ • MODELO • MODEL • MODEL		1211 LP	1515 LP	2015 LP	2021 LP	2515 LP
Vibrazioni trasmesse all'utilizzatore • Arm vibrations • Vibrations transmises à l'utilisateur • Effektivbeschleunigung Hand-Arm Vibrationswert • Vibraciones transmitidas al usuario • Op de gebruiker overgebrachte trillingen • Ταλαντώσεις μεταδόμενες στον χρήστη • Efektiivinen kiihyvyyss käden-käisvarren tärinäärvor • Эффективное ускорение вибрации кисть/рука • Aceleração efectiva, valor relativo à vibração mão-braço • Vibracie kaje se prenose na korisnika • prenos vibracij na uporabnika • Vibrationer som överförs till användaren • Vibrasjoner overført til brukeren • Vibrace přenášené na uživatele	m/s² m/c²	2	2,2	2,2	2,3	2,3
Forza di reazione sulla pistola alla pressione di lavoro (max) • Recoil force of gun at operating pressure (max) • Force de recul au niveau de la pistolet à la pression de service maxi • Rückstoßkraft an der Handspritzpistole • Fuerza de retroceso en la pistola a máx. presión de trabajo • Terugstotende kracht op het sprotpistol bij werkdruk (max) • Δύναμη αντίδρασης του πιστολού ψεκασμού • Pistoolin takaiskukyky työpaineeseen nähden • Реактивная сила пистолета при рабочем давлении • Forca de repulsão na pistola com uma pressão de regime (máx.) • Jačina reakcije pištolja u odnosu na radni pritisak (maks.) • Reakcijska sila na brizgalki z delovnim tlakom (največ) • Reaktionskraft på pistolen vid (maximalt) driftstryck Mått • Reaksjonskraft for pistolen ved arbeidstrykk (maksimalt) • Reakční síla na pistoli při (max.) prac. tlaku	N	28	43	50	70	70
Dimensioni • Dimensions • Dimensionen • Dimensiones • Dimensões • Dimensjone • Mere-Mål • Mål • Rozměry	mm MM	500 x 900 x 830				
Peso • Weight • Poids • Gewicht • Peso • Gewicht • Bárócs • Paino • Bec • Peso • Težina • Teža • Vikt • Vekt • Hmotnost	Kg KG	50	53	56	61	53

La ditta costruttrice si riserva il diritto di modificare senza preavviso i dati indicati • The manufacturer reserves the right to modify the declared data without advance notification • La maison se réserve le droit de modifier sans préavis les données déclarées • Das Haus behält sich das Recht vor, die genannten Angaben ohne Vorankündigung zu ändern • La empresa se reserva el derecho de modificar sin preaviso los datos declarados • De fabrikant behoudt zich het recht voor om de verklaarde gegevens zonder voorafgaand bericht te wijzigen • Η κατασκευαστική εταιρεία επιφυλάσσει το δικαίωμα να τροποποιήσει χωρίς προειδοποίηση τα υποδεικνύμενα δεδομένα • Valmistaja pidättää oikeuden muuttaa tietoa ilman erillistä ilmoitusta • Изготовитель имеет право вносить изменения в указанные данные без предупреждения • A empresa fabricante reserva-se o direito de modificar os dados indicados sem aviso prévio • Poduzeće proizvođač ostavlja sebi na pravo da unese izmjene navedenih podataka bez da prethodno obavijesti o tome • Podjetje proizvajalca si pridružuje pravico do spremembe navedenih podatkov brez vnaprejnjega obvestila • SV - Tillverkaren förbehåller sig rätten att utan föregående meddelande ändra de angivna uppgifterna • NO - Produsenten forbeholder seg retten til å endre de angitte dataene uten forhåndsvarsel • Výrobce si vyhrazuje právo změnit uvedené údaje bez předchozího upozornění.

ΕΛ ΔΗΛΩΣΗ ΠΙΣΤΟΤΗΤΑΣ ΕΚ/ΕΕ σύμφωνα με τις Οδηγίες της (και των ακόλουθων τροποποιήσεων): **FI EY/ EU-VAATIMUSTENMUKAISUUSVAKUUTUS** direktiivien (ja niiden muutosten) mukaan: **RU ДЕКЛАРАЦИЯ СООТВЕТСТВИЯ ЕС/ЕУ** в соответствии с Директивой (и последующими изменениями): **SL IZJAVA ES/ EU O SKLADNOSTI** v skladu z direktivami (in sledecimi spremembami): **HR CE/EU-IZJAVA O SKLADNOSTI**: je u skladu sa direktivama, te njihovim naknadnim modifikacijama **BG ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ:** Отговаря на директиви CE и последващи модификации **NO EF/EU-SAMSVARSERKLÆRING** i samsvar med direktivene (og senere endringer): **SV EG/EU-FÖRSÄKRA OM ÖVERENSSTÄMMELSE** i enlighet med direktiven (och efterföljande ändringar):



2006/42/EC
2014/30/EU
2000/14/EC-
2005/88/EC
2011/65/EU

EL Δηλώνει υπεύθυνα ότι η μηχανή: **FI Vakuuttaa omalla vastuullaan että kone:** **RU Объявляет под свою ответственность, что машина:** **SL Izjavlja pod lastno odgovornostjo, da je naprava** **HR Izjavljuje pod vlastitom odgovornošću da stroj:** **BG Декларираме на собствена отговорност че машина:** **NO forsikrer under eget ansvar at maskinen:** **SV Förklrar nedan sitt ansvar för att maskinen:**

Lavorwash S.p.A
via J.F.Kennedy, 12 – 46020 Pegognaga (MN) – Italy

EL ΠΡΟΪΟΝ:	ΜΗΧΑΝΗΜΑ ΚΑΘΑΡΙΣΜΟΥ ΜΕ ΥΨΗΛΗ ΠΙΕΣΗ	MONTELOU-TΥΠΟΣ:	COLUMBIA LP	- P86.0354
FI TUOTE:	KORKEAPAINEPESURI	MALLI -TYYPPI:	COLUMBIA-R LP	
RU АППАРАТ:	ГИДРОЧИСТИТЕЛЬ ВЫСОКОГО ДАВЛЕНИЯ	МОДЕЛЬ-ТИП:		
SL PROIZVOD:	VISOKOTLAČNI VODNI ČISTILNI APARAT	MODEL-VRSTE:	EXPLORER LP	
HR PROIZVOD:	VISOKOTLAČNI VODENI ČISTAC	MODEL-TIP:	EXPLORER-R LP	
BG ПРОДУКТ:	Водоструйка за измиване под налягане	Модел-Тип:		
NO PRODUKT:	HØYTTRYKKSASKER	MODELL TYPE:	HYPERC LP	
SV PRODUKT:	HÖGTRYCKSTVÄTT	MODELL-TYP:	HYPERC-R CR LP	

EL είναι σύμφωνο με τις δομές **ΕΚ/ΕΕ** και τις μεταγενέστερες τροποποίσεις τους καθώς και με τους κανονισμούς EN και τις μεταγενέστερες τροποποίσεις τους. **FI** On yhdenmukainen **EY/ EU** direktiivin ja niitä seuraavien standardimuuosten, ja niitä seuraavien muutosten kanssa. **RU** соответствует требованиям директив **ЕС/ЕУ** и последующих модификаций, EN и стандартам, и последующих модификаций. **SL** V skladu z direktivami in njunimi kasnejšimi spremembami ter s standardi **ES/EU**, in z njihovimi kasnejšimi spremembami. **HR** je u skladu sa direktivama **CE/EU**, te njihovim naknadnim modifikacijama te standardima EN, njihovim naknadnim modifikacijama. **BG** Отговаря на директиви **ЕС/ЕУ** и последващи модификации и норми EN. **NO** er i overensstemmelse med **EF/EU** direktivene, og senere endringer, samt med standarderne og senere endringer : **SV** Överensstämmer med **EG/EU** direktiven och dess följande modifieringar och standarderna och dess följande modifieringar.

EN 60335-1
EN 60335-2-79
EN 62233:2008
EN 50581

EN 55014-1:2006+A1:2009+A2:2011
EN 55014-2:2015
EN 61000-3-2:2014.
EN 61000-3-3:2013.

EL Η συγκεκυτη προσβολή (εται στον αριθ.27 του συνημμένου I. Διαδικασία αξιολόγησης της πιστότητας σύμφωνα με το συνημμένο V. **FI** Laite on määritellyt liitteineen I kohdassa n°27. Vaatimustenmukaisuuden arviointimentettely liitteeen V mukaan I. **RU** устройство не определено. 27 корпуса I. Процедура оценки соответствия в соответствии с приложением V. **SL** aparat je določen v št. 27 priloga I. Izjava o skladnosti je v skladu s prilogom V. **HR** aparat je određen u br. 27 prilogu I. Izjava o skladnosti u skladu je s prilogom V. **BG** приспособление в съответствие с №27 от приложението I. Съответствие с процедурата съгласно приложение V. **NO** (støytslipp i miljøet fra utstyr til utendørs bruk): Utstyrret er definert i nummer 27 i tillegg I. Anvendt metode for samsvarsverdning i henhold til tillegg V. **SV** Apparaten beskrivs ingående i bilaga I, paragraf n. 27. Procedur för utvärdering av överensstämmele enligt bilaga V.

LpA 78dB(A)	LwA 87dB(A) K (uncertainty) 2dB (A)	LwA 89dB(A)
EL Στάθμη ηχητικής πίεσης	Μετρημένη στάθμη ηχητικής ισχύος	Εγγυημένη στάθμη ηχητικής ισχύος
FI Äänenvaiston taso	Mitattu äänitehotaso	Taattu äänitehotaso
RU Уровень звукового давления	Акустическая измеренная мощность	Акустическая мощность предоставлено
SL Stopnja zvočnega hrupa	Izmerjen nivo zvočne moči	Zagotovljen nivo zvočne moči
HR Razina akustičnog pritiska	Izmjerena razina zvučne snage	Zajamčena razina zvučne snage
BG Акустично налягане	Измерено ниво на мощност на звука	Гарантирано ниво на мощността на звука
NO Akustisk trykknivå	Lydefekt, målt	Lydefekt, garantert
SV Akustisk trycknivå	Uppmätt ljudeffektnivå	Garanterad ljudeffektnivå
EL Ο τεχνικός φάκελος βρίσκεται στη στον οδό		
FI Tiedoston thecnique alkien:	Lavorwash S.p.A via J.F.Kennedy, 12 46020 Pegognaga (MN) – Italy	Pegognaga 2018/05/05
RU Технические брошюры на		
SL Tehnični akti so pri podjetju		
HR Tehnički akti nalaze se pri poduzeću		
BG Технически файл при:		
NO File thecnique fra:		Giancarlo Lanfredi (Legal Representative Lavorwash S.p.A.)
SV Technisch dossier bij:		

DICHIARAZIONE CE/UE DI CONFORMITÀ ai sensi delle Direttive (e successive modificazioni): **EC/EU**
DECLARATION OF CONFORMITY according to Directive (and following amendments): **FR DÉCLARATION**
CE/UE DE CONFORMITÉ aux termes des directives européennes (et leurs modifications successives): **DE EG/**
EU-KONFORMITÄTSERKLÄRUNG gemäß Richtlinien (und späteren Änderungen): **ES DECLARACIÓN**
CE/UE DE CONFORMIDAD en virtud de las Directivas (y sus sucesivas modificaciones): **NL EG/EU-**
CONFORMITEITSVERKLARING volgens de Richtlijnen (en latere wijzigingen): **PT DECLARAÇÃO CE/UE DE**
CONFORMIDADE nos termos das Directivas (e modificações posteriores): **CS ES/UE Prohlášení o shodě podle**
Směrníc (a jejich následných variací):



2006/42/EC
2014/30/EC
2000/14/EC
2005/88/EC
2011/65/EU

Lavorwash S.p.A.
via J.F.Kennedy, 12 – 46020 Pegognaga (MN) – Italy

IT Dichiara sotto la propria responsabilità che la macchina: **EN** Declares under its responsibility that the machine: **FR**
Atteste sous sa responsabilité que la machine: **DE** Erklärt unter der eigenen Verantwortung die Maschine: **ES** Declara
bajo su propia responsabilidad que la máquina **NL** Verklaart geheel onder eigen verantwoordelijkheid dat de machine: **PT**
Declara sob própria responsabilidade que a máquina: **CS** Na vlastní zodpovědnost prohlašuje, že přístroj:

IT PRODOTTO: IDROPULITRICE AD ALTA PRESSIONE
EN PRODUCT: HIGH PRESSURE CLEANER
FR PRODUIT: NETTOYEUR HAUTE PRESSION
DE PRODUKT: HOCHDRUCKREINIGER
ES PRODUCTO: (HIDRO)LIMPIADORA DE ALTA PRESIÓN
NL PRODUCT: HOGEDRUKREINIGER
PT PRODUTO: LAVADORA DE ALTA PRESSÃO
CS PRODUKT: VYSOKOTLAKÝ ČISTIČ

MODELLO - TIPO: COLUMBIA LP - P 86.0354
MODEL - TYPE: COLUMBIA-R LP
MODELE - TYPE:
MODELL - TYP: EXPLORER LP
MODELO - TIPO: EXPLORER-R LP
MODEL - TYPE:
MODELO - TIPO: HYPER C LP
MODEL-TYP: HYPER-R CR LP

IT è conforme alle direttive **CE/UE** e loro successive modificazioni, ed alle norme EN: **EN** complies with directives **EC/EU** and subsequent modifications, and the standards EN: **FR** est conforme aux directives **CE/UE** et aux modifications successives ainsi qu'aux normes EN: **DE** entspricht folgenden **EG/EU**-Richtlinien einschließlich späteren Änderungen und EN-Normen: **ES** está en conformidad con las directivas **CE/UE** y sus sucesivas modificaciones y también con la norma EN: **NL** in overeenstemming is met de Richtlijnen **EG/EU** en latere wijzigingen daarop en de normen EN: **PT** está em conformidade com as directrizes **CE/UE** e as suas sucessivas modificações bem como com as normas EN e as suas sucessivas modificações. **CS** je v souladu se směrnicemi **ES/UE** a jejich následnými změnami, a normami EN:

EN 60335-1
EN 60335-2-79
EN 62233:2008
EN 50581
EN 55014-1:2006+A1:2009+A2:2011
EN 55014-2:2015
EN 61000-3-2:2014.
EN 61000-3-3:2013.

2000/14/EC - 2005/88/EC **IT** 2000/14/EC: L'apparecchiatura è definita al n°27 dell'allegato I. Procedura di valutazione della conformità secondo l'allegato V. **EN** The appliance is defined by no. 27 of the enclosure I. Conformity evaluation procedure in accordance with enclosure V. **FR** L'outilage est défini par nr. 27 du annexe I. Procédure d'évaluation de la conformité conformément l'annexe V. **DE** Das Gerät ist am Nr. 27 der Anlage I bestimmt. Konformitätswertungsverfahren gemäß der Anlage V. **ES** El producto es definido en el nº 27 anexo I. Procedimiento de evaluación de la conformidad de acuerdo con el anexo V. **NL** De apparatuur wordt gedefinieerd van de n°27 volgens aanhangsel I. Wegingsmethode van de conformiteit volgens aanhangsel V. **PT** O produto é definido pelo nº 27 anexo I. Procedimento de avaliação da conformidade de acordo com anexo V. **CS** Zarižení je definováno pod č. 27 přílohy I. Postupy posuzování shody dle přílohy V.

Lpa 78dB(A)

- Livello pressione acustica
- Acoustic pressure
- Niveau de pression acoustique
- Schalldruckpegel
- Nivel de ruido
- Geluidsdrukniveau
- Nível da pressão acústica
- Hladina akustického tlaku

LwA 87dB(A) K (uncertainty) 2dB (A)

- Livello di potenza sonora misurato
- Acoustic power measured
- Niveau du puissance sonore mesuré
- Abgemessenes Schalleistungsniveau
- Nivel de potencia acústica mesurado
- Geluidsdrukniveau LwA gemeten
- Nível de potencia acústica mensurada
- Naměřená hladina akustického výkonu

LwA 89dB(A)

- Livello di potenza sonora garantito
- Acoustic power granted
- Niveau du puissance sonore garanti
- Garantiertes Schalleistungsniveau
- Nivel de potencia acústica garantido
- Geluidsdrukniveau LwA gegarandeerd
- Nível de potencia acústica garantida
- Garantovaná hladina akustického výkonu

IT Il fascicolo tecnico si trova presso

EN Technical booklet at

FR Dossier technique auprés de:

DE Das technische Aktenbündel befindet sich bei

ES El manual técnico se encuentra en:

NL Technisch dossier bij:

PT Processo técnico em:

CS Technická dokumentace se nachází v:

Lavorwash S.p.A.
via J.F.Kennedy, 12
46020 Pegognaga
(MN) – Italy

Pegognaga 2018/05/05

Giancarlo Lanfredi
(Legal Representative
Lavorwash S.p.A.)